


# RCR40 Front Sway Bar Installation Diagram

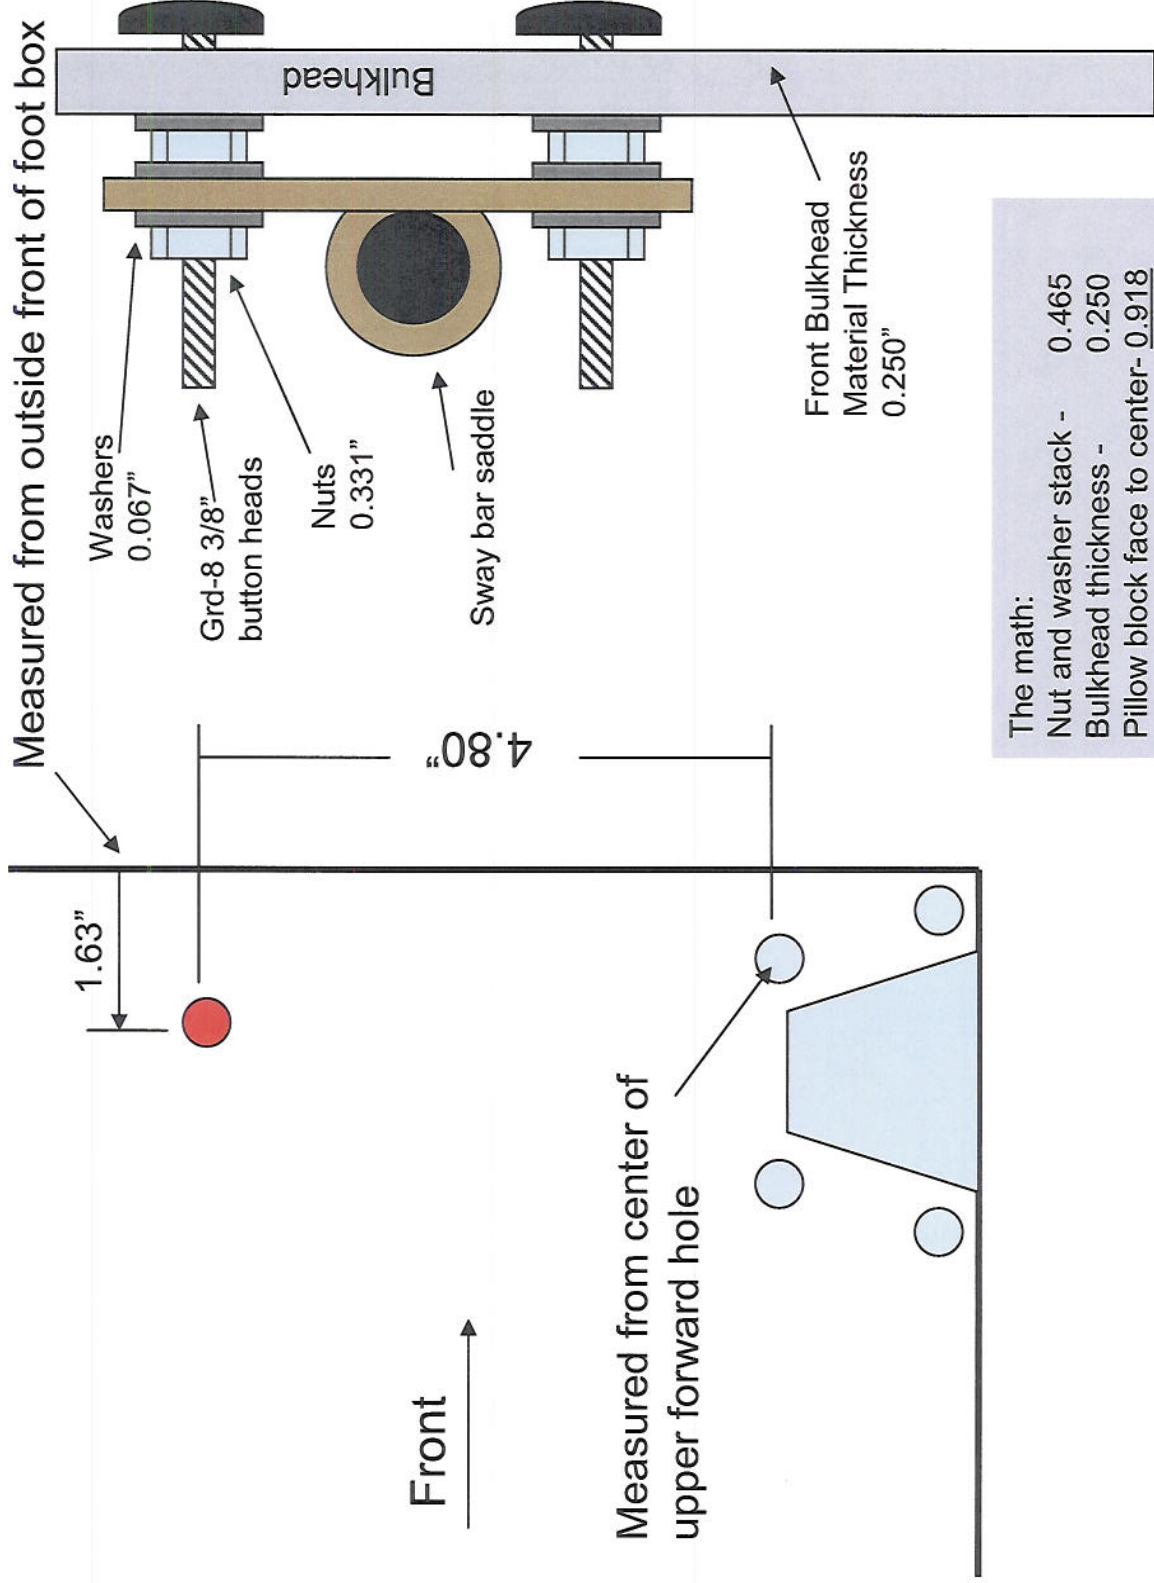

The math:  
 Nut and washer stack - 0.465  
 Bulkhead thickness - 0.250  
 Pillow block face to center- 0.918  
 (see red dot ) 1.633"